

6. Retail Accessories

Selected accessories are available to purchase from your local Bachmann stockist to keep your new model in good order for years to come including:

36-570 – Bachmann Plux22 DCC Loco-Decoder, add a DCC decoder to use your model on a DCC system such as Bachmann's Dynamis Ultima system.

36-030 – Long Straight NEM Coupling with Pocket (x10)

7. DCC Decoder & Sound Decoder Fitting - Plux22

Please Note: SOUND FITTED models come with a DCC Decoder already fitted.

Digital Command Control (DCC) allows for greater functionality and control over the models on your layout: such as the simultaneous control of speed & direction of multiple Locomotives, enables the use of DCC controlled track, points and other DCC Decoder fitted accessories and unlocks the full potential of SOUND FITTED models bringing a whole new level of realism to your model railway.

This Class 20/3 model comes with a factory fitted speaker, all that is required to bring Sound to your model is a Plux22 Sound Decoder pre-programmed with the sound file of your choice.

fig.9


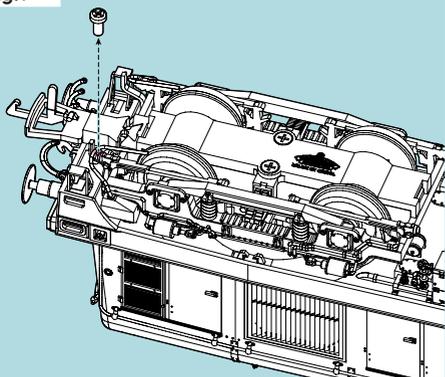


fig.10

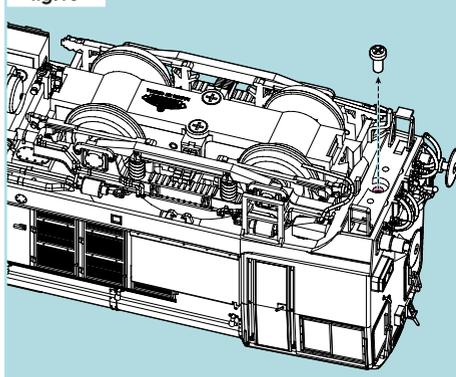

1 & 2. Remove the Standard Coupling and Body Screws (Figs. 9 & 10).

3. Carefully remove the loco body from the Chassis (Fig. 11).

fig.11

